

# Load cell Instruction Manual

**ZHONGHANG ELECTRONIC MEASURING INSTRUMENTS CO. LTD.**

Add: No. 66 Zhongyuan Road, Puzhen, Hanzhong, 723007, Shaanxi, China

Tel: 86-916-2386032

Fax: 86-916-2577213

E-mail: [admin@zemic.com.cn](mailto:admin@zemic.com.cn)

Issued: October 1<sup>st</sup> 2007

Implemented: October 1<sup>st</sup> 2007

---

**ZHONGHANG ELECTRONIC MEASURING INSTRUMENTS CO. LTD.**

Specifications and dimensions are subject to change without notice and do not constitute any liability whatsoever.

Zemic Europe B.V.  
Leerlooierstraat 8  
4871 EN Etten-Leur  
The Netherlands

Nr. 2015.12 Atex Load cell instruction manual Rev2

1/7

T: +31 76 50 39480  
F: +31 76 50 39481  
[info@zemic.nl](mailto:info@zemic.nl)  
[www.zemic.nl](http://www.zemic.nl)

## Instruction Manual for Using Products

### 1. Introduction

These Instruction Manual refer to ZHONGHANG ELECTRONIC MEASURING INSTRUMENTS CO., LTD. Transducers load cells for potentially explosive atmospheres. These load cells are certified according to ATEX Directive 94/9/EC. Please read the whole instruction before taking load cells into service. Never work on load cells for potentially explosive atmospheres if you do not have the knowledge, competence or authorization to do so. Load cells may only be used for their intended purpose and in the circumstances specified. ZHONGHANG ELECTRONIC MEASURING INSTRUMENTS CO., LTD. Transducers cannot be held liable for damage and injuries resulting from use other than those intended. Load cells must only be used in their correct technical condition and whilst conforming to the instructions of relevant application notes.


#### 1.1 Product Description

Load cell convert mechanical force into an electrical signal. The element deforms elastically when subjected to a weight. ZHONGHANG ELECTRONIC MEASURING INSTRUMENTS CO., LTD. Transducers has load cells which are certified for use in a potentially explosive atmosphere. These load cells have a special mark:



#### 1.2 Products Labelling


##### 1.2.1 Internal Label in English:

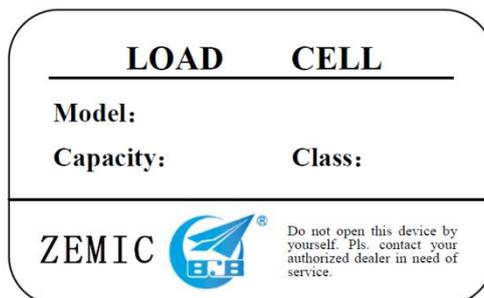

Note1: Model and Capacity and Class.

Note2: ZEMIC is the trademark of ZHONGHANG ELECTRONIC MEASURING INSTRUMENTS CO., LTD.

##### 1.2.2 External Label in English:

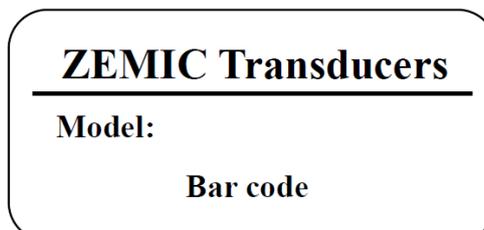

Note1: Model.

Note2: Bar code.

Specifications and dimensions are subject to change without notice and do not constitute any liability whatsoever.

## 1.2.3 FM and ATEX and CSA Labeling

See the attachment 1.

## 1.3 Product identification and technical Specifications

Load cell specific information is printed on the Calibration Certificate. If this certificate is not included, contact your supplier. Cable colour codes should be checked against the Calibration Certificate.

## 2. Special conditions for safe use

If a load cell is used as EEx ia or EEx ib, then it must be connected to certified intrinsically safe circuits. Terminals used in between, must comply to EN 60079-11. For EEx nA, 1D, 2D, or 3D use of load cells the free end of the permanently connected cable must be connected outside the hazardous area or, when inside the hazardous area, in an enclosure with a suitable type of explosion protection and in accordance with the requirements of the type of protection applied. For the parameters of the intrinsically safe circuits, refer to the electrical data at the installing drawing 521302.

## 3. Installation

Install in hazardous (classified) locations / explosive atmospheres per drawing 521302.

**Rick to life!** Never use load cells in a potentially explosive atmosphere which are not correctly certified. Use shunt-diode barriers for load cell installation in potentially explosive atmospheres. When using more than one barrier channel in a circuit, ensure that the combination of voltages and currents can be safely applied in that particular hazardous area. Install load cells in accordance with the applicable EU. The circuit is to be considered as being connected to earth due to surge protection.

To prevent load cell from being damaged during installation, it is strongly recommended to use dummy load cells or mounting assemblies that can be "locked". Load cells should be handled with care, especially those with a low rated capacity or with metal bellows construction. When connecting polarized shunt-diode barriers, do not connect the wrong polarity. It will destroy the barrier! Cables used must always be suitable for the environment in which they are to be used. Many indicators compensate for line voltage losses by increasing their voltage output. Do not pass the compensation limit of the indicator! Never carry load cells by their cables.

Avoided electric welding after installation of load cells. If welding is necessary and the load cells cannot be removed then disconnect each individual load cell cable from the junction box or measuring device. In order to avoid a current path through the load cells, place an earthing clamp in the close proximity of the weld. Furthermore, connect a flexible copper lead over each load cell. Never use mounting bolts to pull uneven surfaces together-use shims as appropriate. Never use excessive force when fitting or tightening mounting bolts or hardware, especially on low capacity cells. Do not twist "S" cells when tightening threaded fittings.

## 4. Use and Maintenance

**4.1** Please note that load cells may be damaged because of (shock) overloading, lightning strikes or heavy surges. In current, chemical or moisture ingress, mishandling (dropping, lifting with cable, etc), vibration, seismic, seismic events or internal component malfunction, Inspect load also before and after the seasons. Give special care and attention to critical areas of the load cell such as metal bellows, seals etc. Regularly inspect for corrosion damage to the load cell and mounting hardware. If practical, carry out cleaning and any remedial work (paint or other protective coating). Do not allow build-up of debris around load cells or mounts.

Specifications and dimensions are subject to change without notice and do not constitute any liability whatsoever.

## 4.2 Maintenance Tools and the essential characteristics of tools which may be fitted to the equipment contains:

- a) A 4 1/2 digital avometer to measure resistance, voltage, current and capacitance, etc.
- b) An all-around composite screwdriver to open integrated weighing instruments, the specification includes 4", 6", 8";
- c) A tweezers, the specification includes 6", 8";
- d) A long nosed pliers, the specification includes 6", 8";
- e) A 30w internal heating type earthing electric iron, rosin and soldering wires.
- f) A pair of scissors, the specification includes 5", 7";
- g) An assorted file, the specification includes 4", 6";
- h) A standby Load cell and a set of weights.

## 4.3 Maintenance and Service Proceedings

In order to ensure the instruments, scale to be used normally and prolong their lifetime, we must obey to the following rules:

- (1) Do not use indicators under strong sunlight, the placing area should be flat
- (2) When Load cell is putted it in a place full of dusts, please remove dust termly.
- (3) Weight (including tare weight) forbids exceeding maximum rated amount.
- (4) If the machine can't be used for a long time, power supply switch should be taken off from power supply which can be very good connection to earth.
- (5) Forbid using strong solvent (e.g.) to clean shell.
- (6) Forbid soaking water in indicator.
- (7) If there is some problem occurring in the process of using, please cut power supply and stop trying if he is non-professional operators and give indicator to repair in professional office.
- (8) Don't change circuit or some electronic parts of an apparatus models connected with circuit.

## 4.4 Repairmen and maintaining service

- (1) Our company can provide one year maintaining guarantee service for selling products (including some platform scale, table scale, truck scale, vehicle scale and so on. The maintaining guarantee service begins from selling day and each year our company will provide technical service after sales for all the products sometime.
- (2) During maintaining guarantee service time if our products exist problems which are caused not by customers' wrong operation or non-force majeure natural disaster, our company will have responsibility to repair.
- (3) Our company doesn't agree customers to repair by themselves to avoid expand problems. If due to customers' repairman occurs extra problems even it is in maintaining guarantee service time our company will not provide free service.
- (4) Generally speaking, when non-load cells customers or non-weighing instrument customers use our products if the problems occur, the products should be sent to company or inform company engineers' problems condition by fax to solve the problem in short time and correct methods.

Specifications and dimensions are subject to change without notice and do not constitute any liability whatsoever.

## 5. Failure Analysis and guidance on potential misuse

5.1 Failure Phenomenon	5.2 Cause analysis	5.3 Guidance
After assembly of a scale, the reading of empty load is big and hard to set to zero.	Overload or impact makes load cells to deform into the plastic which causes permanent deformation.	Raise and let down the scale carefully and slowly; level up the scale several times after mounting and let the bearing points load capacity close to each other, thus avoid above half-capacity load to some bearing point or several bearing points when being suspended.
Weighing capacity error varies directly with the increase of load, use avometer to measure input and output impedance, one line or several lines and other lead wires' resistances are very large.	Load cells' outgoing lines or connection terminals are being stroke, pressed or stretched and make the circuit in the wire brake.	The outgoing line should be protected with spring sheath, thus avoid the lead wire from being extended or pressed to slot. Because of foundation pit, do trial assembly many times and remove load cells if possible.
Use avometer to measure input and output impedance, the resistances are 1100-1410Ω (bridge resistance 700Ω) or 500-710Ω(bridge resistance 350Ω)	Being lighted or stroke by strong current or voltage impulse, bridge arm is burned.	Adapt up-side-down mounting, that is to say, backward under the weighing platform; give priority to ground mounting by setting slope to two ends. If designing foundation pit, blowing pipe diameter should meet the demand for water discharge on rainy days.
Lower sensitivity, poor interference-resistant, widespread fluctuation of weighing capacity data.	The shield connected to other resources (with charge).	If the shield is not needed, pack it with insulating tape and put it into junction box to avoid the touch with bridge-type connection terminal.
No zero return	The speed on vehicle scale may be too fast.	This speed should be limited within 10km/h.

**Rick to life!** : Under no circumstances should fault location and trouble-shooting be attempted in a hazardous area where there is danger of explosion. ZHONGHANG ELECTRONIC MEASURING INSTRUMENTS CO., LTD. Transducers authorized personnel may only carry out trouble-shooting and repair. Should a load cell cease to function, do not just reconnect: Mechanical failure may have catastrophic effects.

Never use a Megohmmeter to measure input or output resistance, as they normally operate at voltages far in excess of maximum load cell excitation voltages!


Specifications and dimensions are subject to change without notice and do not constitute any liability whatsoever.

## 6. The standards

Title	Standard No.	Date
Electrical Equipment for Use in Hazardous (Classified) Locations, General Requirements	FM - 3600	November 1998
Intrinsically Safe Apparatus and Associated Apparatus for Use in Class I, II, & III, Division 1 and Class I, Zone 0 & 1 Hazardous (Classified) Locations	FM - 3610	January 2007
Nonincendive Electrical Equipment for Use in Class I and II, Division 2, and Class III, Division 1 and 2 Hazardous (Classified) Locations	FM - 3611	December 2004
Electrical and Electronic Test, Measuring and Process Control Equipment	FM - 3810	January 2005
Degrees of protection provided by enclosures (IP code)	ANSI/IEC	2004
Intrinsically Safe and Nonincendive Equipment for use in Hazardous Locations	CSA C22.2 No.157	1992 (Reaffirmed 2006)
Nonincendive Electrical Equipment for use in Class I, Division 2 Hazardous Locations	CSA C22.2 No. 213	1987 (Reaffirmed 2004)
Safety Requirement for Electrical Equipment for Measurement, Control and Laboratory use – Part 1 General Requirements	CSA C22.2 No.1010.1	July 2004
Degrees of protection provided by enclosures (IP code)	CSA C22.2 No. 60519	July 2005
Electrical Apparatus for Explosive Gas Atmospheres – Part 11: Intrinsic safety “i”	CSA-E60079-11	2002 (Reaffirmed 2006)
Electrical Apparatus for Explosive Gas Atmospheres – Part 0: General Requirements	CSA-E60079-0	2002 (Reaffirmed 2006)
Electrical Apparatus for Explosive Gas Atmosphere Type of Protection “n”	CSA E60079-15	2002
Electrical apparatus for explosive gas atmospheres – Part 0: General requirements	EN 60079-0	July 2006
Explosive atmospheres – Part 11: Equipment protection by intrinsic safety ‘i’	EN 60079-11	January 2007
Electrical apparatus for explosive gas atmospheres – Part 15: Construction, test and marking of type of protection ‘n’ electrical apparatus (IEC 60079-15: 2005)	EN 60079-15	2005
Electrical apparatus for use in the Presence of combustibile dust – Part 0: general requirements	EN 61241-0	2004
Electrical apparatus for use in the presence of combustibile dust – Part 11: protection by Intrinsic Safety ‘iD’	EN 61241-11	2005
Degrees of protection provided by enclosures (IP code)	EN 60529	October 1991 Amendment 1 February 2000

Specifications and dimensions are subject to change without notice and do not constitute any liability whatsoever.

## Attachment 1:

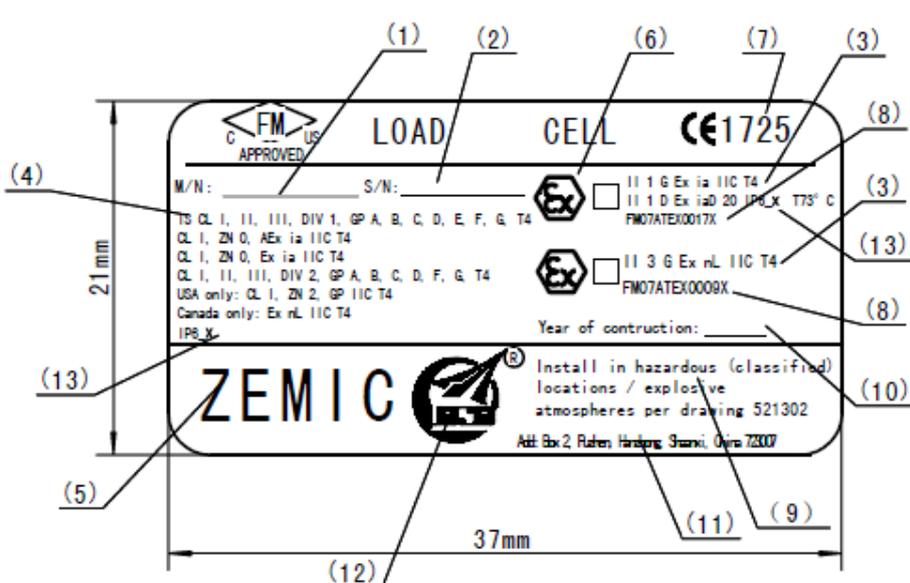BP	Drawing no.	表面粗糙度		热处理	
EX		表面处理			
					
<p>(1) .ZEMIC'S TYPE IDENTIFICATION                  (2) .ZEMIC'S SERIAL NUMBER                  (3) .ATEX CLASS                  (4) .FM CLASS                  (5) .THE ZHONGHANG ELECTRONIC MEASURING INSTRUMENTS CO., LTD                  (6) .TARGET DIRECTIVE MARKING                  (7) .THE NAME OR MARK FO THE ISSUER OF THE CERTIFICATE                  (8) .FM AND ATEX CERTIFICATION NUMBRE                  (9) .INSTALLATION DRAWING                  (10) .YEAR OF CONSTRUCTION                  (11) .ZEMIC'S ADDRESS                  (12) .REGISTERED TRADEMARK OF ZEMIC                  (13) .INSERT THE APPROPRIATE IP CODE BY ZEMIC'S MODEL</p>					
日期					
签					
会	金 礼				
原图号	底图号	更改标记	更改单号	签名	日期
		Nameplate		Drawing no.	
		材 料		BP	
				图样标记	重量比例
				共 页	第 页 第 版
				(B)	

Specifications and dimensions are subject to change without notice and do not constitute any liability whatsoever.

# Manufacturing Declaration *Herstellungserklärung*

no: 2014/26 rev.0

Manufacturer  
*Hersteller*

Zemic Europe BV  
Leerlooierstraat 8  
4871 EN Etten-Leur  
The Netherlands

Product description  
*Produktbezeichnung*

2H3, B3G, H3G, BM3, H3, H3C, H3A, H3E, H3F, H3J, B8D, B8K, BM8D, BM8F, BM8H, H8, H8B, H8C, H8E, H8K, HM8, HM8C, B6E, B6F, B6G, B6N, B6Q, BM6A, BM6G, H6B, H6E, H6E3, H6F, H6G, H6G5, B9C, B9D, B9E, B9F, B9H, B9J, B9K, H9B, H9C, H9D, HM9B, HM9C, HM9E, BM11, HM11, BM14A, BM14C, BM14D, BM14G, BM14K, H14W, HM14C and BM24R

We hereby declare that above mentioned products in the form as delivered is in conformity with the provisions of the following European Directive:

*Wir erklären hiermit das oben bezeichnete Produkten stimmen in der von uns in Verkehr gebrachten Ausführung mit den Vorschriften folgender Europäischer Richtlinie überein:*

ATEX Directive 94/9/EC  
EN 60079-0:2012  
EN 60079-15:2010  
EN 60079-31:2009

Conformity to the directives 94/9/EC is assured through the application of the above standards.

*Die Konformität zur 94/9/EC wird nachgewiesen durch die Enthaltung oben angeführten Normen.*



Atex Marking / Atex Zündschutzart

 II 3D Ex tc IIIC T73°C Dc  
 II 3G Ex nA IIC T4 Gc

Permitted ambient temperature range / zulässiger Umgebungstemperaturbereich

$-20^{\circ}\text{C} \leq T_{\text{a}} \leq +40^{\circ}\text{C}$

Electrical Data / Elektrische Daten  
Powersupply / Stromversorgung

Un = 20V

Special conditions for Safe Use in Zone 2 and Zone 22  
Besondere Bedingungen zum Einsatz in Zone 2 und Zone 22

1. Steps must be taken to ensure that the rated voltage through transients cannot be exceeded by more than 40°C. This criterion is fulfilled, if supplies are derived from SELV (safety Extra Low Voltage) only in accordance with IEC 950/EN 60950 /VDE 0805. *Es müssen Maßnahmen getroffen werden, dass die Nennspannung durch Transienten um nicht mehr als 40% überschritten werden kann. Dies ist der Fall, wenn die Geräte ausschließlich mit SELV (Safety Extra Low Voltage) betrieben werden. (gemäß IEC 950/EN 60950 /VDE 0805).*
2. Do not disconnect equipment when a flammable combustible atmosphere is present. *Die elektrischen Verbindungen dürfen unter Spannung nicht aufgetrennt werden solange nicht sicher ist, dass der Bereich nicht explosiv ist.*

Etten-Leur, 25.06.2014  
Zemic Europe BV

  
Erik van Wijk  
Managing Director

**ZEMIC**  **EUROPE**  
Leerlooierstraat 8, 4871 EN Etten-Leur  
+31765039480  
www.zemic.nl 